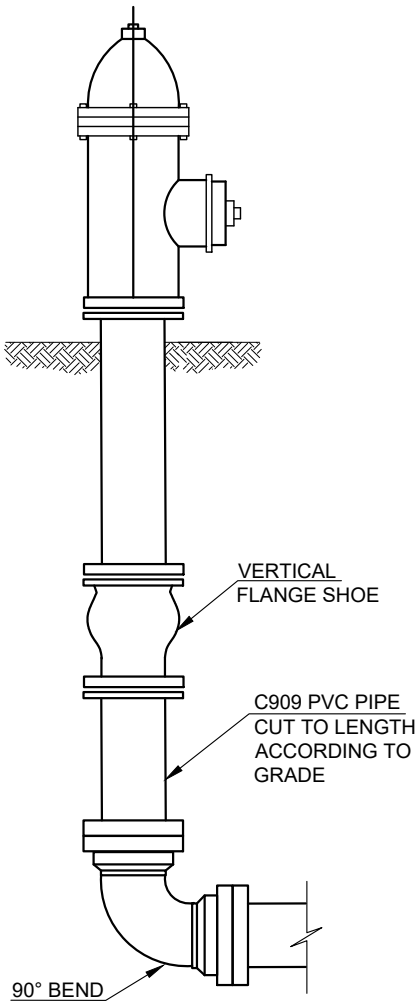

NOTES:

1. USE VERTICAL SHOE FOR BURY DEPTHS GREATER THAN 4.5 FEET.
2. ALL OTHER HYDRANT REQUIREMENTS, REFER TO THE DISTRICT STANDARD FIRE HYDRANT DETAIL W5
3. ALL FITTINGS SHALL BE RESTRAINED MECHANICAL JOINT
4. INSTALL SQUEEGEE MATERIAL TO THE TOP FLANGE OF THE VERTICAL SHOE
5. PLACE ¾-INCH WASHED ROCK AROUND THE SHOE TO A MINIMUM OF 6 INCHES ABOVE THE TOP FLANGE

REV. DATE:	09/2025	DEEP BURY FIRE HYDRANT	
SCALE:	N.T.S.		
		NORTH TABLE MOUNTAIN WATER AND SANITATION DISTRICT	DWG. NO.
		14806 WEST 52ND AVENUE GOLDEN, COLORADO 80403-1228	W5a